

TABLE OF CONTENTS

<u>Paragraph</u>		<u>Page</u>
	Introduction.	1
A	Camera Complete.	1
B	Optical Measurement of Lens Travel.	1
C	Rangefinder.	2
D	Rangefinder Operation.	3
E	Rangefinder Infinity	3
F	Double Image Adjustment.	3
G	Actuating Bracket Adjustment.	3
H	Rangefinder and Lens Synchronization	3
J	Multiple Lens Fitting	4
K	Rangefinder Housing Exchange	4
L	Rangefinder Trouble Shooting Chart.	4
M	Service Equipment	5
N	Super Graphic Analyzer - General.	5
P	Super Graphic Analyzer - Materials	6
Q	Super Graphic Analyzer - Calabration	11
R	Super Graphic Analyzer Camera Test	12
S	Camera Basic - Disassembly and Reassembly.	17
T	Focusing Frame Assembly - Disassembly and Reassembly . .	19
U	Front Standard Complete - Disassembly and Reassembly . . .	21
V	Rangefinder Housing Complete - Disassembly and Reassembly	22
W	Bed Complete - Disassembly and Reassembly	25
X	Back Assembly - Disassembly and Reassembly.	26

Figure

	Parts List Introduction	29
1	Camera Complete - Super Graphic	30
1A	Camera Complete - Super Speed Graphic	30
2	Camera Basic (Cameras bearing serial no. over 646124) . . .	32
3	Focusing Frame Assembly.	35
4	Front Standard Complete (Cameras bearing serial no. over 646124)	36
5	Rangefinder Housing Complete (Cameras bearing serial no. over 646124)	41
6	Bed Complete	46
7	Back Assembly	48
8	Body Complete (Cameras bearing serial no. over 646124) . . .	52
9	Camera Basic (Cameras bearing serial no. up to 646124) . . .	54
10	Front Standard Complete (Cameras bearing serial no. up to 646124)	57
11	Rangefinder Housing Complete (Cameras bearing serial no. up to 646124)	59
12	Body Complete (Cameras bearing serial no. up to 646124) . . .	62