

Tools needed:

3mm hex key

8mm hex key

rubber mallet

Crank puller for square taper spindle

2.5 mm hex key

5mm hex key

6mm hex key

Step 1 Open seat tube access panel
(3mm hex key). (1.1, 1.2)

1.1

1.2

Step 2 Unplug all three cables inside
(black, blue, green). (2.1, 2.2, 2.3)



2.1

2.2

2.3

Step 3 Remove non-drive side crank bolt (8mm hex key). (3.1, 3.2)

3.1

3.2

Step 4 Use crank puller (4.1) for square taper spindle to remove non-drive side crank arm. (4.2)

4.1

4.2

Step 5 Remove the bottom bracket pinch bolts from the non-drive side of the bottom eccentric (5mm hex key). (5.1, 5.2, 5.3, 5.4)

5.1

5.2

5.3

5.4

Faraday

Replacing the Battery
on a Faraday Porteur and Porteur S
12.8.15_v1